

DJSF1352-D 导轨式直流电能表
DJSF1352-D rail-mounted DC power meter

安装使用说明书 V1.0
Installation and Operation Instruction V1.0

安科瑞电气股份有限公司

ACREL CO., Ltd.

申 明

版权所有，未经本公司之书面许可，此手册中任何段落、章节内容均不得被摘抄、拷贝或以任何形式复制、传播，否则一切后果由违者自负。

本公司保留一切法律权利。

本公司保留对本手册所描述之产品规格进行修改的权利，恕不另行通知。订货前，请垂询当地代理商以获悉本产品的最新规格。

DECLARATION

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form by any means, electronic, mechanical photocopying, recording, or otherwise without prior permission of Acrel. All rights reserved.

This company reserve power of revision of product specification described in this manual, without notice. Before ordering, please consult local agent for the latest specification of product.

目录

CONTENTS

1 概述 Overview	1
2 技术参数 Technical parameters	1
3 安装指南 Installation guide	2
3.1 外形及安装尺寸 Shape and installation dimensions	2
3.2 产品安装 Product installation	3
3.3 端子及接线 Terminals and wiring	3
3.4 注意事项 Precautions	4
3.4.1 通讯接口接线 Communication interface wiring	4
3.4.2 端子螺丝扭力 terminal screw torque	4
5 使用指南 Operation guide	5
5.1 测量参数 Measurement parameters	5
5.1.1 电力参数 Electrical parameters	错误！未定义书签。
6 通讯指南 Communication Guide	7
6.1 概述 Overview	7
6.2 Modbus 协议 Modbus protocol	7

1 概述 Overview

DJSF1352-D导轨式直流电能表主要针对直流充电桩设计，可测量直流系统中的电压、电流、功率以及电能等。

DJSF1352-D rail-mounted DC power meter designed for DC charging piles, this series of meters can measure the voltage, current, power and energy and so on.

2 技术参数 Technical parameters


技术参数 Technical parameters		指标 Index	
输入 Input	标称值 Nominal value	电压输入范围 Voltage input range	电流输入 Current input
		DC 0-1000V	300A、600A
	过载 Overload	1.2 倍可持续正常工作，2 倍持续 1 秒 1.2 times rated (continuous); 2 times rated/1 second;	
	功耗 Power consumption	电压：≤0.2VA，电流≤0.1VA Voltage: ≤0.2VA, current ≤0.1VA	
精度等级 Accuracy class		B 级(1 级) Class B(Class 1)	
功能 Function	显示 Display	段码式液晶屏（LCD） segment LCD screen (LCD)	
	通讯接口 Communication Interface	RS485	
	通讯协议 Communication protocol	Modbus-RTU，DL/T 645-2007，DLT698	
	脉冲输出 Pulse output	一路秒脉冲输出，一路电能脉冲输出 A second pulse output, a energy pulse output	
见仪表菜单设置中 SYS->PLUS 中显示，例：显示 100，即为 100imp/kWH See the SYS->PLUS display in the meter menu settings. For example: The meter displays 100, which is 100imp/kWH			
工作电源 Power Supply	电压范围 Voltage range	DC 9-36V	
	功耗 Power consumption	≤ 3W	

工频耐压 Power frequency withstand voltage		电源//信号输入//其他回路 3.5KV/1min 除电源和信号输入外其他互不相连回路 2KV/1min Power supply // Signal input // Other circuits 3.5kV/1min Other circuits not connected to each other except power supply and signal input 2kV/1min
冲击耐压 Impulse withstand voltage		±6.5KV
绝缘电阻 Insulation resistance		≥ 40M Ω
平均无障碍工作时间 Average barrier-free working hours		≥50000h
环境 Environment	温度 Temperature	工作温度: -40℃~+70℃; 贮存温度: -40℃~+70℃ working temperature: -40 °C ~ +70 °C; Storage temperature: -40℃~+70℃
	湿度 Humidity	≤95%RH, 不结露, 不含腐蚀性气体 ≤95%RH, no condensation, no corrosive gas
	海拔 Altitude	≤2000m


3 安装指南 Installation guide

3.1 外形及安装尺寸 Shape and installation dimensions

(1) 300A

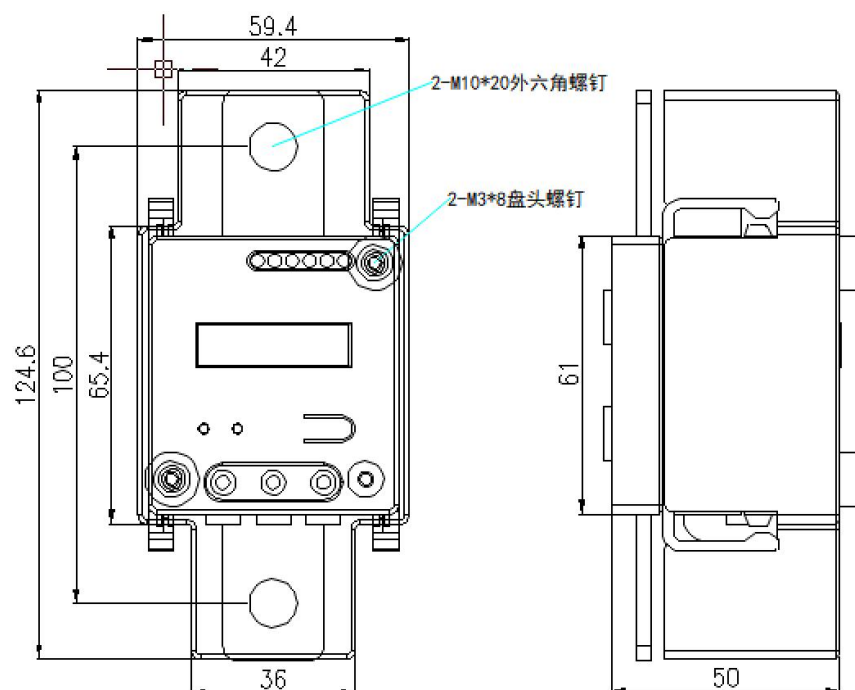

(2) 600A

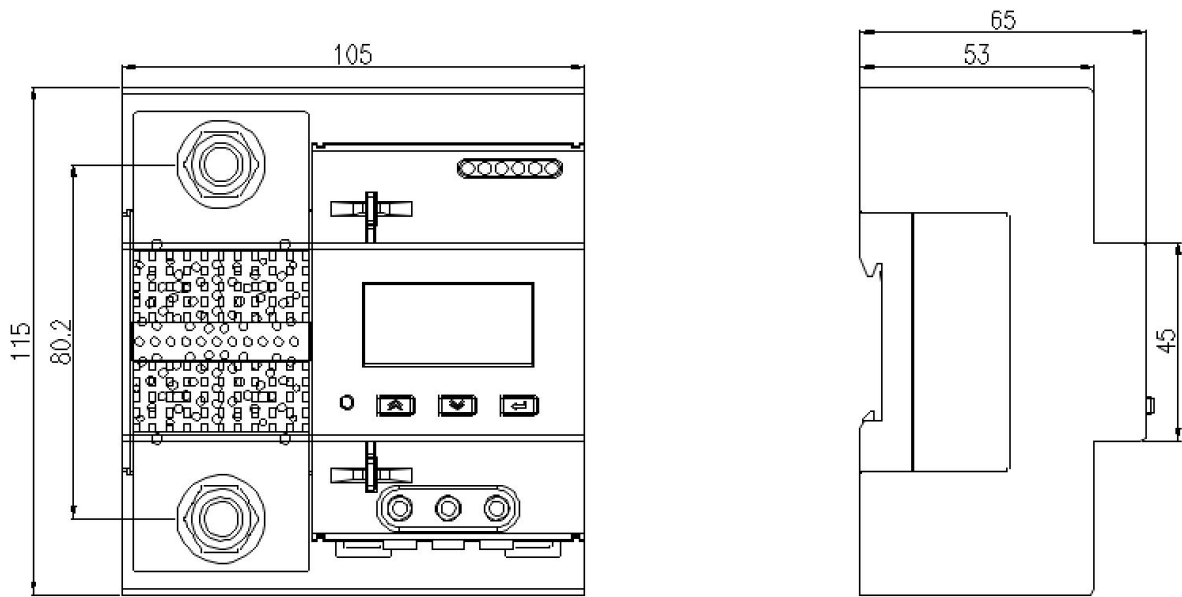


3.2 产品安装 Product installation


采用标准的 DIN35mm 导轨式安装
The meter is designed by standard DIN35mm rail mounted.

3.3 端子及接线 Terminals and wiring

(1) 300A产品

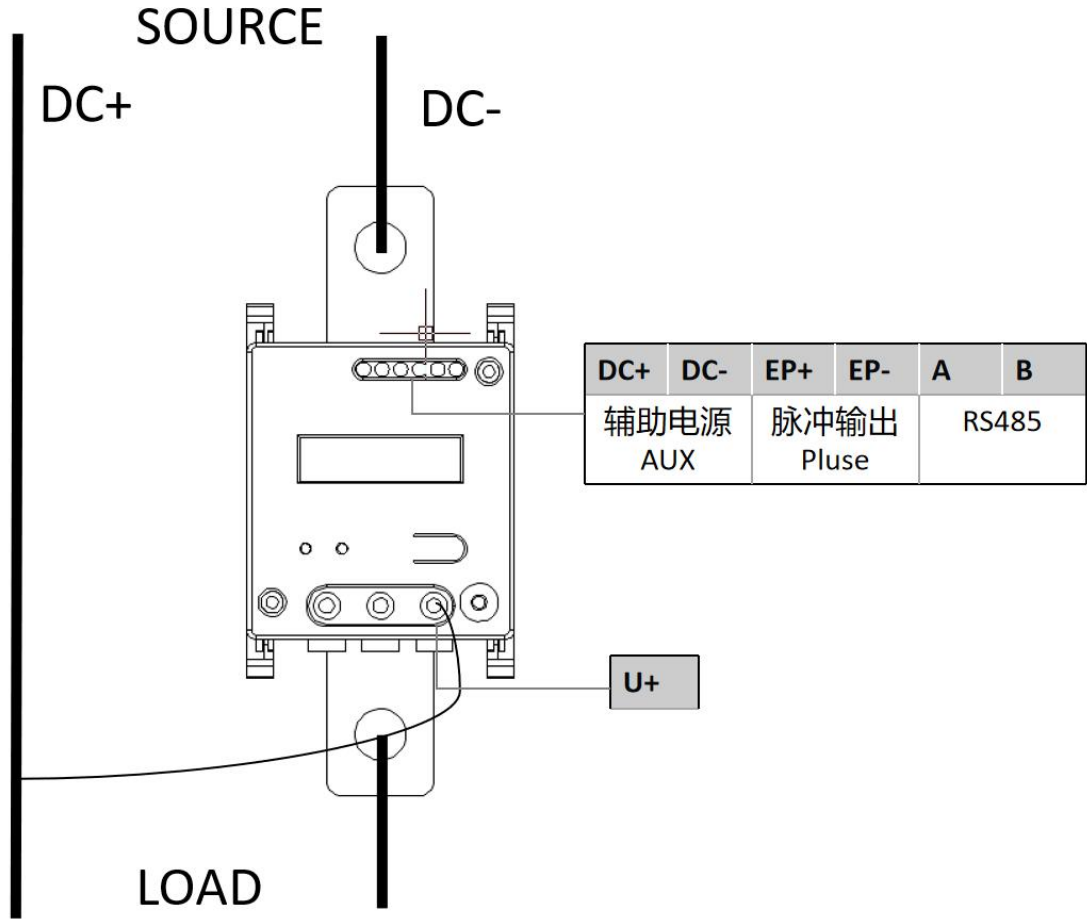


(2) 600A产品

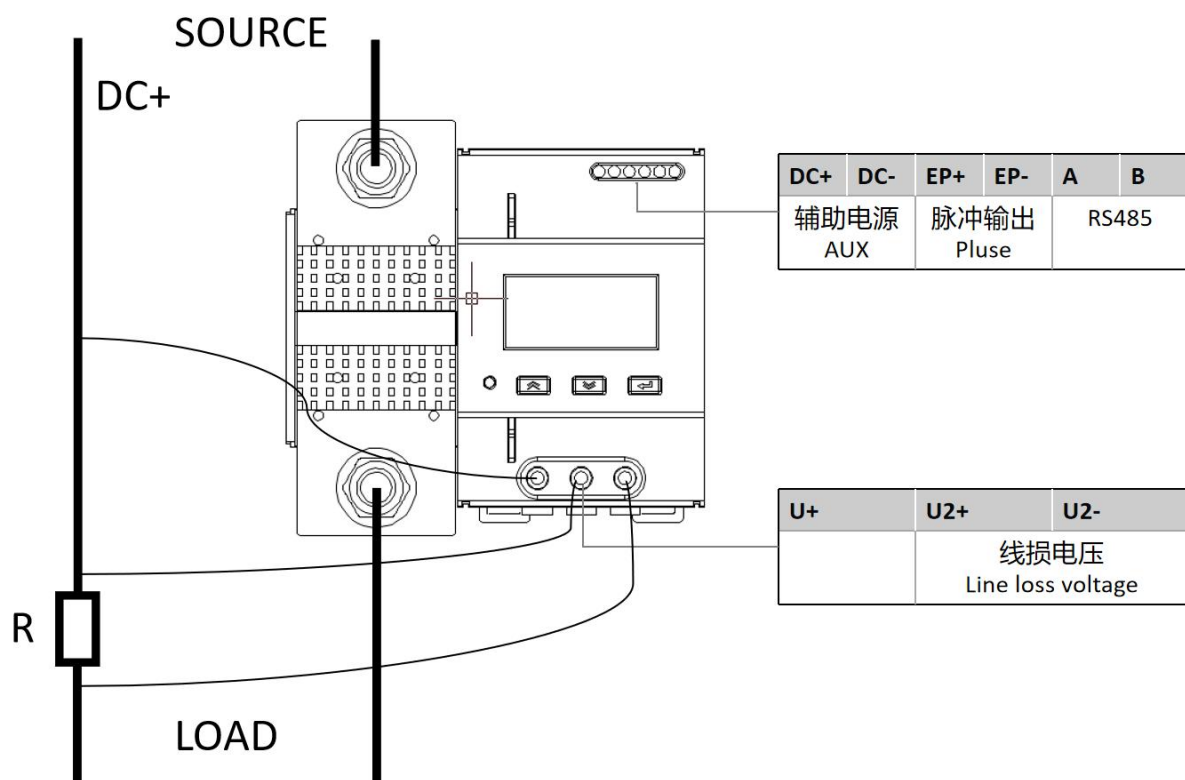

(3) 扩展RS485通讯端子 (RJ12口)

Expanded RS485 communication terminal (RJ12 port)

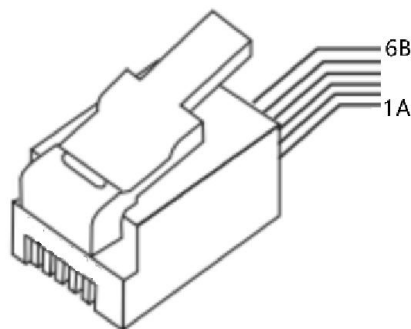

3.4 注意事项 Precautions

3.4.1 通讯接口接线 Communication interface wiring

通讯连接建议使用三芯屏蔽线，每芯截面不小于 0.5mm^2 ，分别接 A、B，屏蔽层接大地，布线时应使通讯线远离强电电缆或其他强电场环境。

The communication connection is recommended to use three-core shielded cable, Cross-sectional area of each core is not less than 0.5mm^2 , is connected to A、 B respectively, shielding layer is connected to the earth. The wiring should be kept away from strong cables or other strong electric field environment.

3.4.2 端子螺丝扭力 terminal screw torque

端子螺丝紧固的扭力不得超过 0.5Nm (3.5Lb-In)。



the tightening torque of terminal screws shall not exceed 0.5Nm (3.5Lb-In)

5 使用指南 Operation guide

5.1 测量参数 Measurement parameters

使用按键可切换显示界面，使用内容如下：

The display interface can be switched by using the buttons. The usage contents are as follows:

显示示例 Display example	内容 content	显示示例解析 Analysis of the Displayed Examples
	电流 current	120.21A
	电压 voltage	400.56V
	功率 power	48.151kw
	正向有功电能 forward Active Energy	123.1254kwh
	反向有功电能 reverse Active Energy	51.3142kwh
	年月日 year、month、day	2024-12-20
	时分秒 hour、minute、second	14:16:51
	仪表内部温度 the internal temperature of the instrument	30.1℃
	modbus 地址 the slave address	1
	RS485 波特率 RS485 Baud Rate	9600
	RS485 校验方式 RS485Parity mode	无校验：none (偶校验：even、奇校验：odd)
	DLT-645 地址高八位 The upper eight bytes of the DLT - 645 address	123456789001

	DLT-645 地址低八位 The lower eight bytes of the DLT - 645 address	
---	---	--

5.2 参数修改

在测量显示菜单中的任一显示项下，长按可进入“PASS”界面，提示输入密码，默认密码 0001，再按，若密码输入错误，则返回“0000”可重新输入；若密码输入正确，则可进行参数设置。设置完成后长按进入“SAVE”界面，按键，切换为“YES”后按则保存并退出，在“no”下按则不保存直接退出。

When in any display item, press  for a long time to enter the "PASS" interface. There is a prompt for password, and the default password is 0001, and then press  again. If the password is incorrectly entered, return to "0000" to re-enter; If the password is entered correctly, the parameters can be set. Press  for a long time to enter the "SAVE" interface, press  to switch to "YES", then press  to SAVE and exit, and press  when switching to "NO" to exit directly, with no need to "SAVE".

可设置项：

Settable Data Items:

符号 Symbol	含义 Meaning	范围 Scope
SYS	diSP 上电后首界面 the initial interface after powering on	0-12
	diSP.tim 轮显时间 scrolling display time	1-90 (s)
	blCd 背光时间 backlight duration	0-9999 (s) 0: 常亮 constantly illuminated
	Code 密码 password	0-9999
	Ep.dot 电能小数位数 decimal places of electrical energy	2、3、4
	Clr EP 清除电能 clear electrical energy	密码修改为 9996 后清除电能 After the password is changed to 9996, the electrical energy will be cleared
	PULS 脉冲常数 pulse constant	650A: 1-100 300A: 1-300
IN	NEg.U 电压反接 reverse voltage connection	off/on
	NEg.I 电流反接 reverse current connection	off/on
	LESS.U 电压屏蔽值 voltage shielding value	0-20.0%
	LESS.I 电流屏蔽值 current shielding value	0-20.0%
	LESS.EP 起动功率 starting power	0-2.5%
bUS	Addr 设备地址	1-247

		device address	
	bAud	波特率 baud rate	1200、2400、4800、9600、19200、38400
	Mode	校验方式 parity	无校验: none 偶校验: even 奇校验: odd 2 位停止位: 2bit
	Baud2	第二路通讯波特率 baud rate of the second communication channel	1200、2400、4800、9600、19200、38400
	Mode2	第二路通讯波校验方式 parity of the second communication channel	无校验: none 偶校验: even 奇校验: odd 2 位停止位: 2bit
	dlt.4FE	645 回复增加前导符 FE the 645 reply adds a leading symbol "FE"	Add0: 不加前导符 add4: 加 4 个前导符 FE
dAtE		日期 date	
tiME		时间 time	
vEr		软件版本号 Software version number	

6 通讯指南 Communication Guide

6.1 概述 Overview

DJSF1352-D 仪表采用 Modbus-RTU 协议: “9600, 8, n, 1”, 其中 9600 为默认波特率, 可通过编程修改为 1200、2400、4800、9600 等; 8 表示有 8 个数据位; n 表示无奇偶校验位; 1 表示有 1 个停止位。

The DJSF1352-D meter uses the Modbus-RTU protocol: “9600, 8, n, 1”, where 9600 is the default baud rate, which can be programmed to change to 1200, 2400, 4800, 9600, etc.; 8 means there are 8 data bits ;n indicates no parity; 1 indicates 1 stop bit.

6.2 Modbus 协议 Modbus protocol

RO: 只读 R/W: 读写 RO: Read Only R/W: Read/ Write

地址 Address	名称 Name	类型 Type	备注 Note	word
0-1	直流电压值 DC voltage value	RO	浮点, 单位 V	2
2-3	直流电流值 DC current value	RO	浮点, 单位 A	2
4-5	功率值 Power value	RO	浮点, 单位 kW	2
6-9	总正向有功电能 Total positive active energy	RO	64 位无符号整形, 单位 0.1WH, 高字节在前, 低字节在后	4

10-13	总反向有功电能 Total reverse active energy	RO	unit WH, high byte is first, low byte is later	4
14-17	正向有功电能（去线损） positive active energy （excluding line losses）	RO		4
18-21	反向有功电能（去线损） reverse active energy （excluding line losses）	RO		4
22-23	正向线损有功电能 positive active energy of line loss	RO	32 位无符号整形，单位 0.1WH，高字节在前，低字节在后 unit WH, high byte is first, low byte is later	2
24-25	反向线损有功电能 reverse active energy of line loss	RO		2
26	温度 temperature	RO	16 位有符号整形，单位 0.1℃	1